

Enable PMLN8123A Bluetooth earpiece on TLK100i

1 Choose WAVE Devices in the WAVE Admin menu and select the device you want to modify. (Click on the TLK100i that you want to modify in the overview)

2 Select Actions.

3 Select Bluetooth Accessories

Device Info

	Reported	Desired
Device Type	TLK100i	-
IMEI	354124100009653	-
Serial Number	341AVJ0244	-
Cellular Status	Activated	-

ATTENTION: If Bluetooth is not enabled, you must do this first under Settings and Menu Visibility.

MOTOROLA SOLUTIONS

Brightness Level 1

Device Mode user

Maintenance Mode PW -

Voice Announcements On

Location On

WiFi On

Cellular On

Bluetooth On

Scan Off

Do Not Disturb Off


Menu Visibility

← DATAMATIK DEMO	Device Info	
DATAMATIK TLK DEMO	Settings	
Users	Menu Visibility	
TalkGroups	Reported	Desired
WAVE Devices	Location <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Clone Devices	Alert Tones <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	Voice Announcements <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	Brightness Level <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	Do Not Disturb <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	WiFi <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	Cellular <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	Bluetooth <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	Scan <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
	Contacts <input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

When this is done, you can add Bluetooth accessory:

Up in the right corner, now select Bluetooth Accessories (Step 3)

You need to enter the name **EP910W_xxxx** and pin code **0000**. (xxxx = last 4 digits of the Bluetooth address. Use PC or Mobile phone to see the Bluetooth address.)

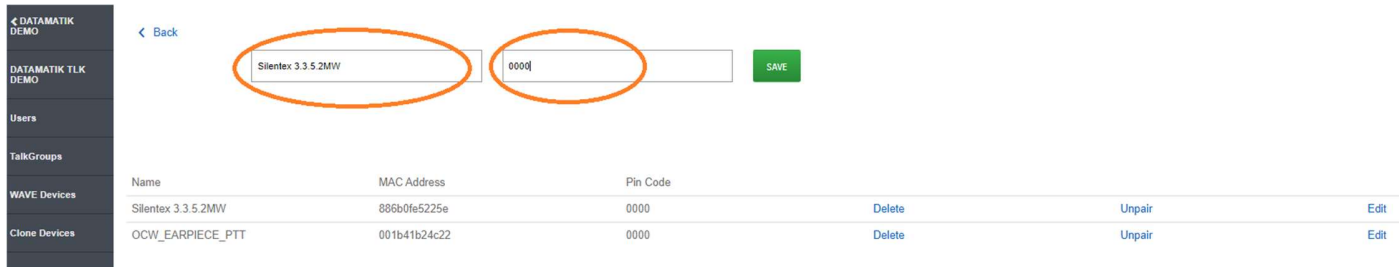

Name	MAC Address	Pin Code			
Silentex 3.3.5.2MW	886b0fe5225e	0000	Delete	Unpair	Edit
OCW_EARPIECE_PTT	001b41b24c22	0000	Delete	Unpair	Edit

Save the settings and the earpiece can be connected.

Press MFB to power on the device and do not release until you hear “pairing”.

Put the TLK100i in pairing mode by pressing the INFO button repeatedly until you hear Bluetooth searching. Wait until you hear Paired.

Then all is set and PMLN8123 works, including the PTT on the microphone boom.